

Programming the remote for use with the Innovative Systems SML-5112W Set Top Box and your TV.



Step 1: Program the remote for the Set Top Box.

Press and Hold the SETUP button until the device button blinks twice. Enter the four-digit code 1376. Verify that the STB button blinks twice to confirm the code is stored.

The Remote is now ready to control the set top box.

Step 2: Program the remote to use with your TV.

Note: The remote control is provided to control the set top box and may not be able to control all brands of TVs or all functions of your TV.

Method One:

These codes are used to quickly program the TV device key for popular TV brands.

1. Turn on your TV.
2. Press and Hold the SETUP button until device button blinks twice and then release.
3. Press and release the TV button. The TV button should stay lit.
4. Point the remote at your device. Press and hold the digit corresponding to your TV brand, until the device turns off and then release.
(Usually happens very quickly)

The remote should now be programmed for your TV.

TV Brand	Digit button
Insignia	1
LG	2
Panasonic	3
Philips/Magnavox	4
Samsung	5
Sanyo	6
Sharp	7
Sony	8
Vizio	9
Westinghouse	0

Method Two:

1. Turn on your TV.
2. On the remote control, press and release the TV button once. It will blink once.
3. Press and hold the SETUP button until the TV button blinks twice, then release the SETUP button.
4. Use the "Method Two Setup Codes" listed on pages 3 - 8 to locate the TV brand name and then enter the first four-digit code for your TV brand. If performed correctly, the TV button will blink twice.
5. Aim the remote control at the device and press the POWER button once. The TV should turn off. If it does not, repeat steps above, trying each code for your brand until you find one that works.

NOTE: If the TV key emits a long blink, the entry is invalid. Repeat steps above and try entering the same code again.

If the TV still does not respond, try searching for the code using Method three.

Method Three:

If your TV does not respond to the remote control after trying all of the codes listed for your TV brand, or if the brand is not listed, try searching for the TV code using the steps below.

1. Turn on your TV.
2. On the remote control, press and release the TV button once. The TV button will blink once. Then press and hold the SETUP button until the TV button blinks twice and then release.
3. Using the digit keys, enter the code 991. The TV button will blink twice.
4. Aim the remote at your TV and press and release the POWER button once.
5. Press and release the CH + button continuously until your TV turns off and then stop.
6. Press and release the POWER button. Your TV should turn on, then press and release the SETUP button to lock in the code. The LED will blink twice to indicate the code is saved.

Note: If your TV does not turn off during step 6, then slowly press and release the CH – button to go back through the codes and then press and release the SETUP button when your TV turns on.

Programming a master power button.

1. Press and hold the SETUP button until device button blinks twice.
2. Enter 995. Device button will blink two times if this was entered correctly.
3. Press and release the POWER button.
4. Press and release the TV button and then press and release the STB button.
5. Press and hold the SETUP button until the device button blinks twice.
6. Press and release the POWER button to test. Your TV and the STB should turn off/on.

Method two Setup Codes For TV

Acer	1339
Admiral	0093, 0463
Advent	1570
Affinity	3716, 3717
Aiko	0092
Aiwa	1362
Akai	0812, 0702, 1675, 0765, 1385
America Action	0180
Anam	0180
AOC	1589, 2087, 1365, 1590, 2014, 2479, 3707, 3720
Aomni	1623
Apex Digital	2397, 0748, 0879, 0765, 1217
Astar	1548, 1738
Asus	3340
Audiovox	1564, 0451, 0180, 0092, 1276, 1766, 1769, 1865, 1868, 2121, 2413, 3065
Auria	2087, 2277
Aventura	0171
Bell & Howell	0154
Berkshire	0047
Bradford	0180
Broksonic	0463, 1938
Candle	0056
Carver	0054
Celebrity	0000
Celera	0765
Champion	1362
Changhong	0765
Citizen	0060, 0092, 0056
Clarion	0180
Coby	3478, 3627, 2315, 2344, 2306, 2314, 2326, 2338, 2340, 2345, 2347, 2348, 2560, 3629, 1538
Commercial Solutions	1447, 0047
Concerto	0056
Contec	0180
Craig	0180, 3423
Crosley	0054, 0000
Crown	0180
Curtis	2397, 3577, 2352, 2466, 2855, 3228, 1326
Curtis Mathes	0702, 0054, 0093, 0060, 0047, 0154, 0451, 0145, 1661, 0056, 1347, 1959
CXC	0180
Cytron	1326
Daewoo	1661, 0661, 0092, 0154, 0451
Dell	1264, 1080, 1863, 2491
Denon	0145
Digital Lifestyles	1765

Disney	1665, 1892
Dumont	0017
Durabrand	0178, 0171, 0463, 0180, 1665
Dynex	2049, 1463, 1785, 1810, 2184
Electric Mirror	3166
Electroband	0000
Electrograph	1755, 1623
Electrohome	0463, 1570, 1670
Element	1886, 1687, 2183, 2964, 3559
Elite	1457
Emerson	1864, 1394, 1886, 0171, 0178, 0154, 0451, 0463, 0180, 1661, 1665, 1913, 1944, 1963, 2183, 2776, 3559
Emprex	1765
Envision	1589, 2087, 1365, 2014
Epson	1122
ESA	0812, 0171, 1944, 1963
Fisher	0154, 1362
Fluid	2964
Fujitsu	0809
Funai	0000, 0171, 0180, 1271, 1904, 1963
Futuretech	0180
Gateway	1756, 1755
GE	1447, 0178, 0047, 0051, 0451, 0765, 1347, 1547
GFM	1864, 1886, 0171, 1665, 1963
Gibraltar	0017
Go Video	1823, 1831
GoldStar	0178, 0056
GPX	3196
Grunpy	0180
Haier	1753, 1749, 2309, 1748, 3382, 1570, 2293
Hallmark	0178
Hannspree	1348, 1351, 2786

Harley Davidson	1904
Harman/Kardon	0054
Harvard	0180
Havermy	0093
Hello Kitty	0451, 2776
Hewlett Packard	1642
Hisense	3519, 2183, 0748, 1314, 1660, 2098
Hitachi	1643, 0145, 1145, 0056, 0679, 1576, 1904, 2756
iLo	1394, 1463, 1286, 1665, 1684, 1990
Infinity	0054
Initial	1990
Insignia	2049, 1641, 1326, 1564, 1423, 2002, 1785, 1892, 2184, 2417, 2751, 0171, 0463, 2088, 1963, 1660, 1517, 1385

Inteq	0017
iSymphony	3094, 3118, 3382
JBL	0054
JCB	0000
JCM	2256
Jensen	1326, 2541
JVC	1774, 1601, 2271, 2264, 0053, 0650, 0463, 0731, 1253, 1670, 1923, 2321
KDS	1498, 1687
KEC	0180
KLH	0765
Konka	1385, 1831
KTV	0180
Lasonic	3198
LG	1423, 2731, 2358, 2424, 0178, 3397, 1265, 2834, 3098, 2612, 0017
Lloyd's	1904
LodgingStar	3147
Luxman	0056
LXI	0156, 0054, 0178, 0047, 0154
MAG	1498, 1687
Magnasonic	1913
Magnavox	1867, 1454, 1455, 2597, 2372, 1866, 0054, 0171, 0706, 1365, 1904, 1913, 1944, 1963, 1990, 2902, 3708, 1755, 0051
Marantz	1454, 0054, 1398
Matsushita	0250, 0650
Maxent	1755, 1757
MB Quart	1868
Megatron	0178, 0145
Memorex	0463, 0178, 0154, 0150, 1570, 1665, 1670, 1785, 1892, 1924, 1927, 1938
MGA	0178, 0150
Midland	0047, 0017, 0051
Mintek	1990
Mitsubishi	1250, 0150, 1797, 0093, 0178
Motorola	0093
MTC	0060, 0056
Multitech	0180
NAD	0156, 1156, 0178, 0056
Naxa	2104, 3154, 3382
NEC	0056, 1398, 1704, 1797, 2293
NetTV	1755
Nexus Electronics	2183
Nikko	0178, 0092

Norcent	1589, 0748, 1365, 1590
Norwood Micro	1286
NTC	0092
NuVision	1657, 2158
Ölevia	1610, 1144, 1240
Onwa	0180
Optimus	0250, 0650, 0154, 1913, 1924, 1927
Optoma	1348
Optonica	0093
Orion	0463, 1463, 1938, 3540
Panasonic	1480, 1291, 0250, 0650, 2264, 1927, 1924, 1947, 0051, 1941, 1310, 1271, 1946
PARK	2104
Penney	0156, 0178, 0060, 0047, 0051, 1347
Philco	1394, 0054, 0171, 1271, 1665, 1963
Philips	1454, 1867, 2372, 1744, 1455, 2374, 2597, 1866, 0690, 0054, 2704, 1394, 0171, 1365, 1944, 1990, 2902
Pioneer	1457, 0679, 1260, 1398
Planar	1589
Polaroid	1523, 1498, 0765, 1276, 1286, 1314, 1326, 1385, 1538, 1687, 1766, 1767, 1769, 2002, 2121
Portland	0451, 0092, 1661
Prima	1753, 1749, 1785
Prism	0051
Proscan	1447, 0047, 1347, 2147, 2183, 2256, 3577
Proton	0178
Proview	1498, 1687
Pulsar	0017
Quasar	0250, 1291, 0650, 0051, 1924, 1927
RadioShack	0178, 0047, 0154, 0180, 0056, 1904
RCA	1447, 2746, 2434, 2932, 2247, 2187, 0047, 1781, 0093, 3577, 3147, 2855, 2002, 1959, 1547, 1385, 1347, 0679, 0051, 1661, 0090
Realistic	0178, 0154, 0180, 0056

RevolutionHD	1623
Runco	0017, 1398
Sampo	1755
Samsung	2051, 0812, 0702, 0060, 1060, 0766, 0814, 1959, 2596, 0650, 0178, 0056
Sansui	0171, 0463, 1463, 1670, 1892, 1904, 1938, 3540, 3564
Sanyo	1142, 0154, 1362, 0054, 0088
Sceptre	0878, 1217, 1360, 1599, 2337, 2506, 2528
Scotch	0178
Scott	0178, 0180
Sears	0156, 0054, 0178, 0047, 0171, 0154, 0056, 1904
Seiki	0178, 2964, 3559, 3560
Seleco	1351
Sens	1865
Sharp	2360, 0818, 0093
Sheng Chia	0093
Sherwood	1399, 3061
Sigmac	3423, 3477
Signature	0054
Solé	1623
Sony	0810, 0000, 1300, 0834, 1685, 1904
Soundesign	0178, 0180
Soyo	1831
Spectroniq	1498, 1687
Squareview	0171
SSS	0180
Starlite	0180
SunBriteTV	1610, 2337, 2528, 2935
Superscan	0864, 0093, 1944
Supersonic	1753, 2104, 3154, 3593
Supreme	0000
SVA	0748, 1963
Sylvania	1864, 1394, 1886, 0171, 1944, 1963, 1271, 0054, 1314, 1665, 1913, 3563
Symphonic	1394, 0171, 0180, 1904, 1913, 1944
Syntax	1610, 1144, 1240
Tandy	0093
Tatung	1756, 1286
TCL	2434, 3183
Technics	0250, 0051
Techwood	0051, 0056
Teknika	0054, 0060, 0180, 0150, 0092, 0056
Telefunken	0702, 0056
Thomas America	1904
TMK	0178, 0056
TNCi	0017
Toshiba	1524, 1656, 2724, 0156, 1156, 0822, 1256, 2006, 0060, 0154, 1265, 2684, 1959, 1945, 1704, 0650, 1369
TruTech	1665, 1723, 2066

TVS	0463
US Logic	1286
Venturer	1865, 1868
Victor	0053
Vidikron	0054, 1398
Vidtech	0178
Viewsonic	2087, 2014, 2049, 0864, 1755, 1564, 0885, 1330, 1365, 1542, 1578, 1627, 2277, 3706
Viore	1684, 2104, 2352, 3094, 3118, 3382
VisionQuest	3380
Vivitek	1369
VIZIO	1758, 3758, 2757, 3358, 2512, 1756, 0864, 0885
Wards	0156, 1156, 0054, 0000, 0178, 0060, 0047, 0154, 0017, 0051, 0180, 0056, 1347
Waycon	0156
Westinghouse	1712, 3579, 0885, 3382, 1300, 1577, 3094, 3470, 0889, 1282, 2293, 0451, 1217
White Westinghouse	0463, 1661
Wyse	1365
Zenith	1423, 0017, 2358, 2731, 0000, 0178, 0047, 0463, 1265, 1145, 0145, 0092, 1661, 1365, 1904, 2612